

# MPC8308-NSG

## 1. Introduction

This quick start guide applies to MPC8308-NSG board with schematic revision B or greater and PCB revision B or greater.

### Contents

<b>1. Introduction.....</b>	<b>1</b>
1.1. MPC8308-NSG Board Details .....	2
1.2. High Level Block Diagram.....	3
1.3. Key Features.....	4
<b>2. Getting Started.....</b>	<b>4</b>
2.1. Preloaded Binaries on the Board .....	4
2.2. Default Booting Method .....	5
2.3. Default Frequency Setting .....	5
2.4. Ethernet and USB Ports.....	5
2.5. UART and SD/MMC.....	6
2.6. Zigbee Module .....	7
2.7. Preparing the Board.....	8
<b>3. References .....</b>	<b>9</b>

## 1.1. MPC8308-NSG Board Details

Figure 1 below displays the MPC8308-NSG board details.

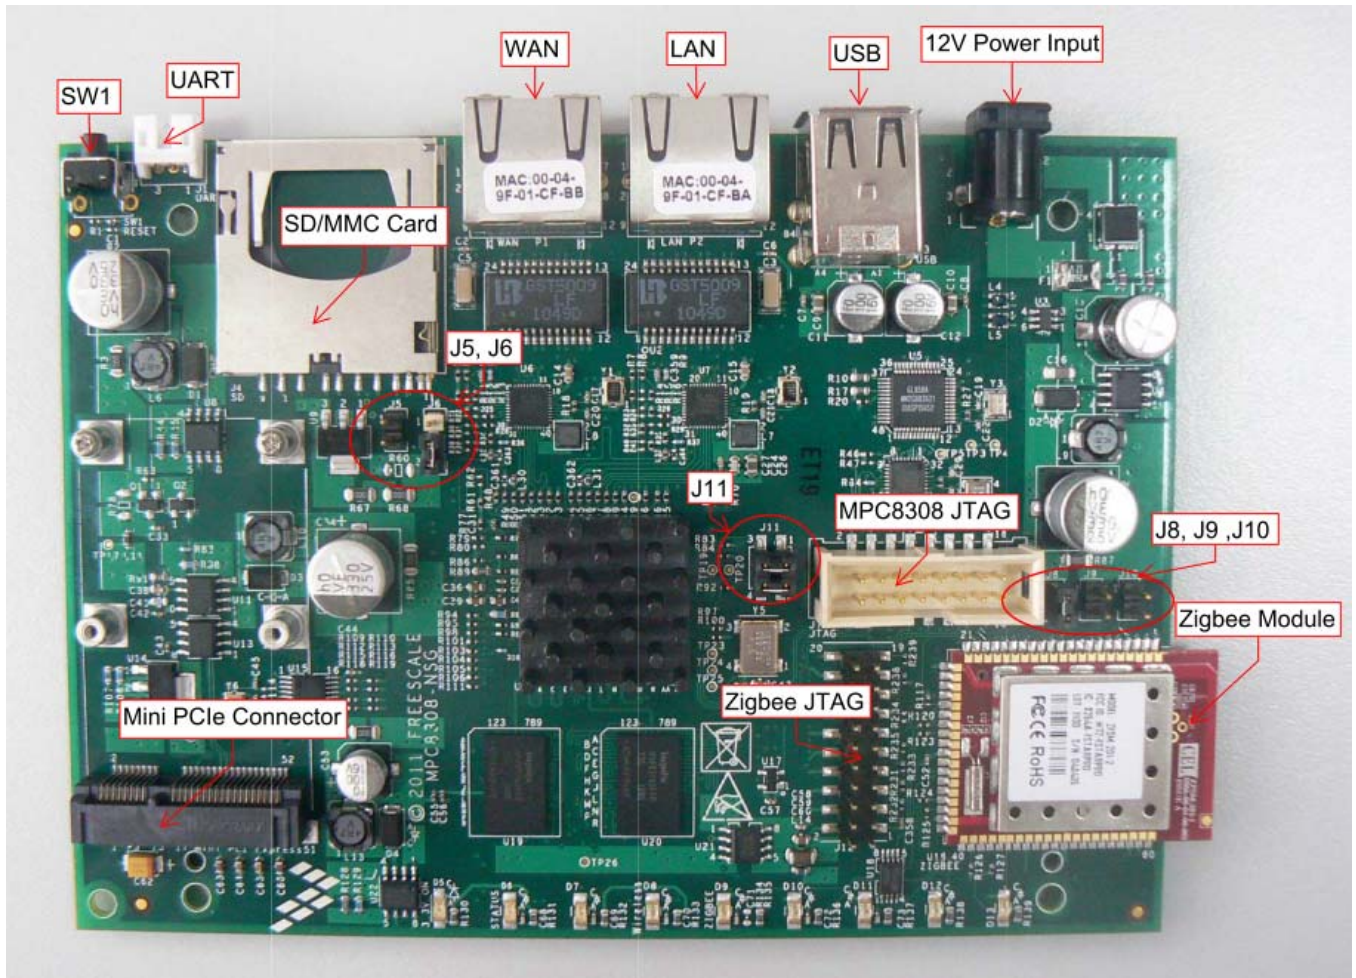


Figure 1. MPC8308-NSG Board Details

## 1.2. High Level Block Diagram

Figure 2 below displays the high level block diagram of the MPC8308-NSG board.

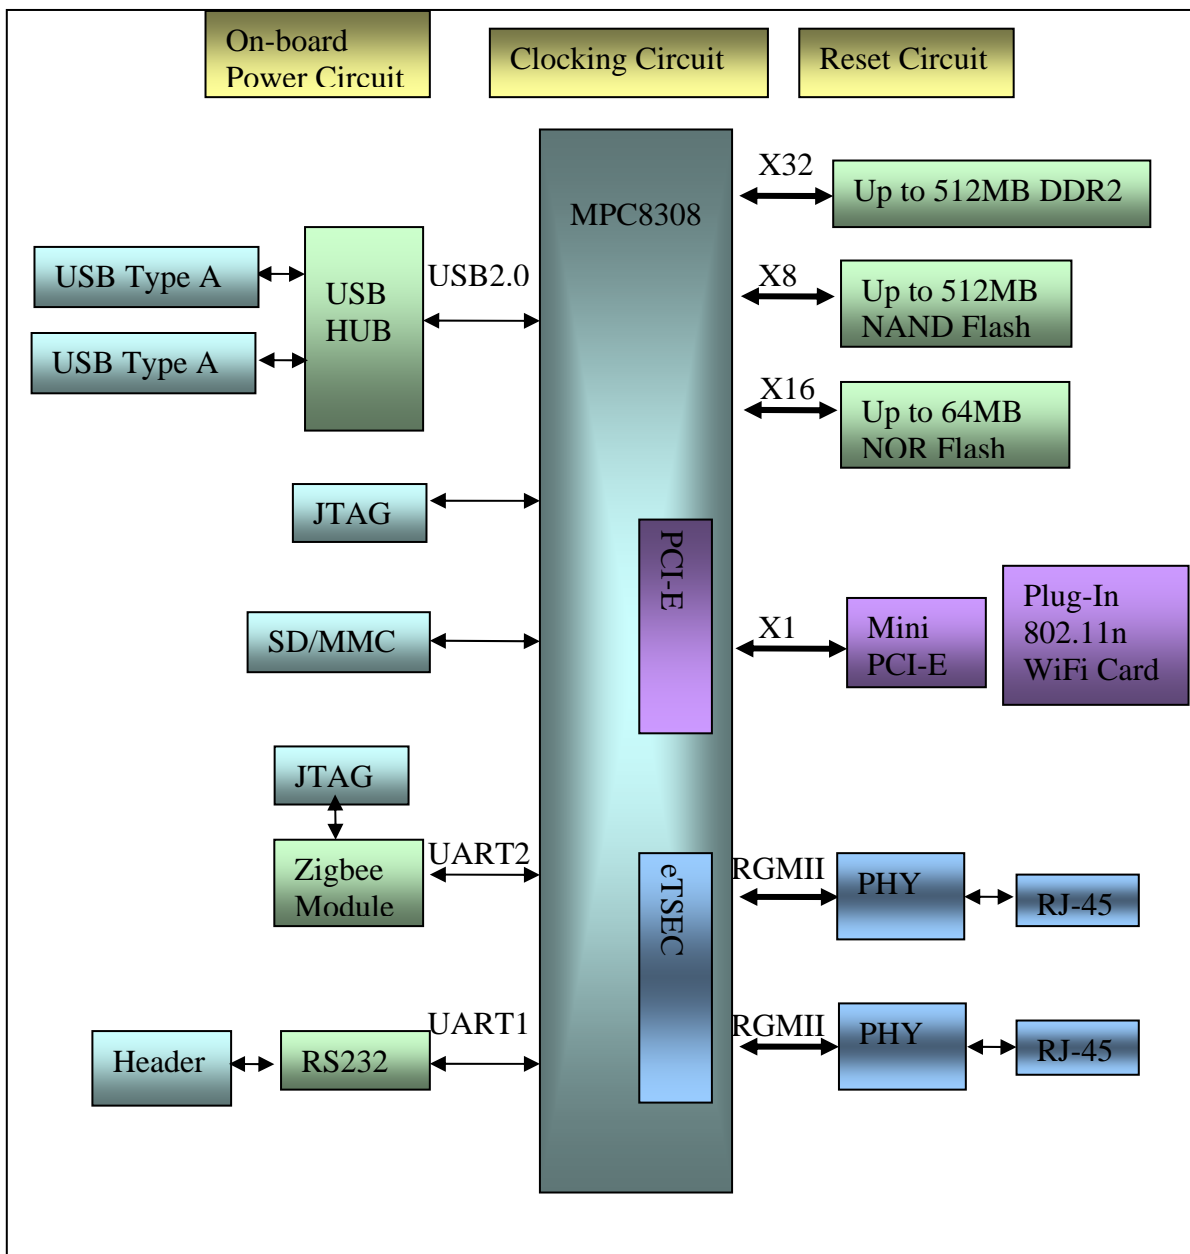


Figure 2. MPC8308-NSG High Level Block Diagram

## 1.3. Key Features

The key features of the MPC8308-NSG board are listed in Table 1:

**Table 1. Key Features of MPC8308-NSG**

Key Feature	Description
CPU	MPC8308 @ 400 MHz core speed, 1.0V core voltage
Memory	DDR2 on-board chips – 128MByte NOR Flash – 8MByte NAND Flash – 32MByte I2C EEPROM – 256Kbit
PCIe	One mini PCIe connector (x1)
Zigbee module	Zigbee/IEEE 802.15.4 module ZFSM-201-2 from CEL
Ethernet	Two 10/100/1000 ports as follows: 1 RGMII PHY connected to eTSEC1 1 RGMII PHY connected to eTSEC2
I2C	Serial EEPROM Secure EEPROM
SD/MMC card slot	
USB	Two Type A USB
UART	UART1: One 1x3 right angle header for serial port UART2: Communication interface between MPC8308 and Zigbee module
Schematics	OrCad
PCB	Allegro

## 2. Getting Started

### 2.1. Preloaded Binaries on the Board

Table 2 displays the MPC8308-NSG kit contents:

**Table 2. MPC8308-NSG Kit**

Kit Contents	Description
On-board NOR Flash loaded with complete NOR flash image	u-boot.bin ulmage dtb

## 2.2. Default Booting Method

By default, the boot loader executes from NOR flash. Different booting modes refer to Table 3.

**Table 3. Flash Memory Chip Select and Boot ROM**

Mode	J11	J6	J5	Description
1 (default)	Pin 1&3: short Pin 2&4: short	Pin 2&3: short	Open	NOR Flash CS0, NAND Flash CS1, Booting from NOR Flash
2	Pin 1&2: short Pin 3&4: short	Pin 2&3: short	Short	NAND Flash CS0, NOR Flash CS1, Booting from NAND Flash
3	Pin 1&3: short Pin 2&4: short	Pin 1&2: short	Open	NOR Flash CS0, NAND Flash CS1, For CodeWarrior connection

## 2.3. Default Frequency Setting

The default frequency is configured by Reset Configuration Word (RCW) . Table 4 displays default frequency settings:

**Table 4. Default Frequency Settings**

Core Freq (MHz)	Platform Freq (MHz)	DDR Freq (MHz)
400	133	266

## 2.4. Ethernet and USB Ports

Figure 3 shows the Ethernet and USB ports on MPC8308-NSG.



**Figure 3. Ethernet and USB Ports on MPC8308-NSG**

Table 5 displays Ethernet ports on MPC8308-NSG.

**Table 5. Ethernet ports on MPC8308-NSG**

Marking on board	On SoC	In u-boot	In Linux	Mode of operation
WAN	eTSEC1	eTSEC0	eth0	RGMII
LAN	eTSEC2	eTSEC1	eth1	RGMII

Table 6 displays USB ports on MPC8308-NSG.

**Table 6. USB ports on MPC8308-NSG**

Marking on board	On SoC	In u-boot	In Linux	Mode of operation
USB-TOP	USB		usb1/1-1/1-1.4	ULPI(external PHY) + USB HUB
USB-BOTTOM	USB		usb1/1-1/1-1.3	ULPI (external PHY)+ USB HUB

## 2.5. UART and SD/MMC

Figure 4 shows the UART port and SD/MMC slot on MPC8308-NSG.



**Figure 4. UART Port and SD/MMC Slot on MPC8308-NSG**

Table 7 displays the UART port on MPC8308-NSG.

**Table 7. UART port on MPC8308-NSG**

Marking on board	On SoC	In u-boot	In Linux
UART	UART1		ttyS0

Table 8 displays the SD/MMC interface on MPC8308-NSG.

**Table 8. SD/MMC on MPC8308-NSG**

Marking on board	On SoC	In u-boot	In Linux	Mode of operation
SD/MMC	eSDHC	FSL_ESDHC	mmcbk0	SD/MMC 1-bit or 4-bit

## 2.6. Zigbee Module

Zigbee module based on Freescale MC13226 is soldered on PCB directly as shown in Figure 5. The 2x10 header J12 is for Zigbee module JTAG development tools.

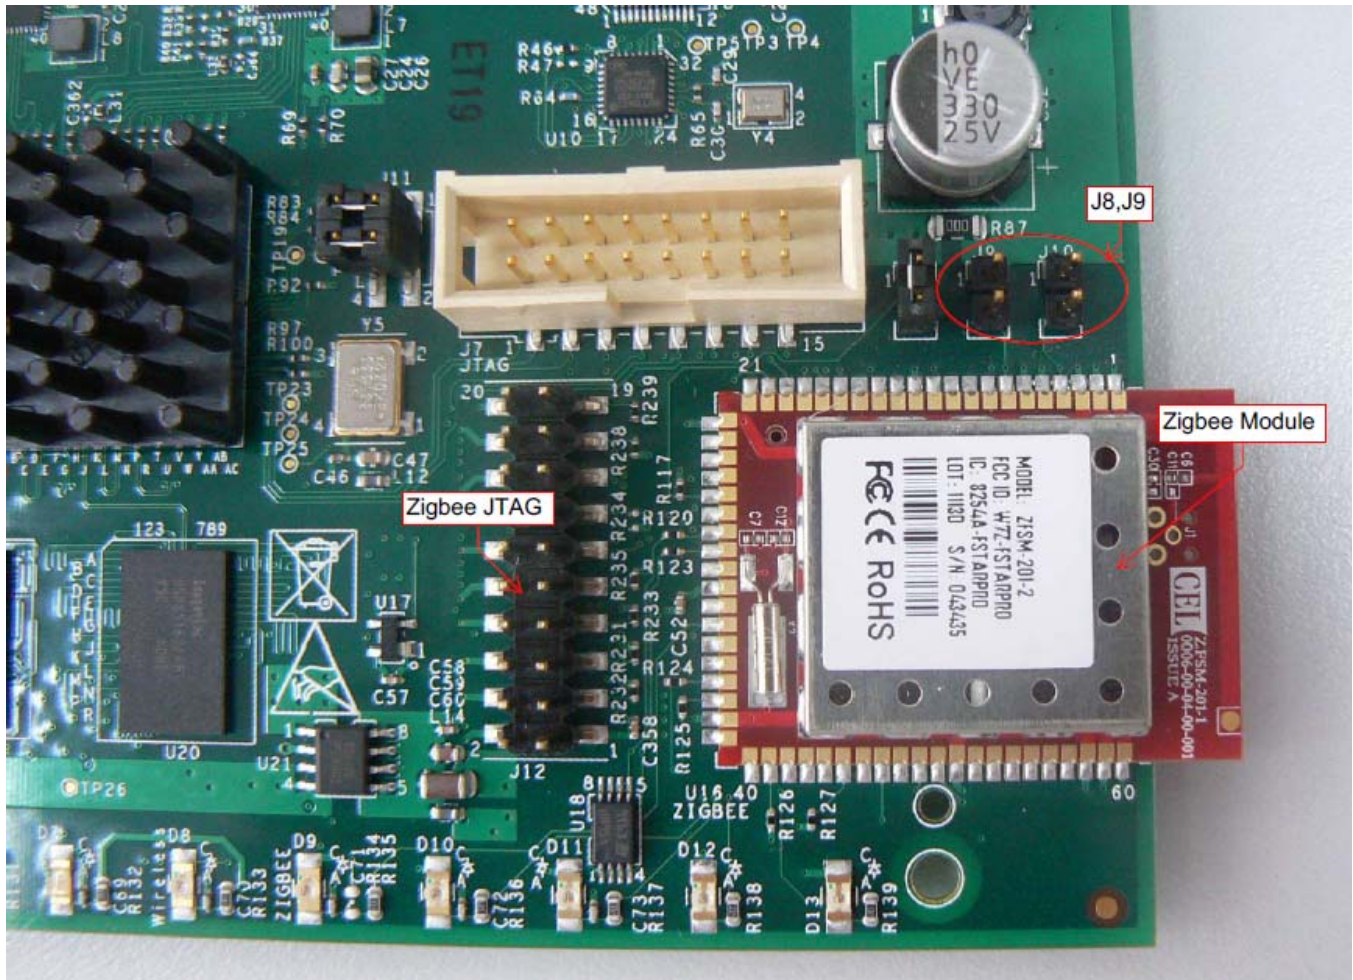


Figure 5. Zigbee Module and Zigbee Module JTAG connector

Table 9 shows how to configure the flash erase mode on Zigbee Module.

Table 9. Flash Erase Mode

Mode	J9	J10	Mode of Operation
Recovery Mode	Short	Short	Erase the FLASH on Zigbee module through the boot process
Non-recovery Mode (default)	Open	Open	Not erase the FLASH on Zigbee module through the boot process

## 2.7. Preparing the Board

1. Ensure that board is not connected to the power.

---

**NOTE** It is recommended to wear the wrist strap before preparing the MPC8308-NSG board to get protection from electrical charges.

---

2. Attach a 3-pin to DB9 RS-232 cable between the MPC8308-NSG (UART) and a host PC.
3. For serial you can use any serial program viz TeraTerm, Hyperterm, etc.
4. Configure the host PC's serial port with the following settings:
  - Data rate: 115200 bps
  - Number of data bits: 8
  - Parity: None
  - Number of Stop bits: 1
  - Flow Control: None
5. Plug in +12V adapter cable
6. U-boot starts followed by Linux. (see example log)

### 2.7.1. Example U-boot Log

U-Boot 2009.11-rc1-00021-gb55d5a0-dirty (Dec 22 2010 - 23:22:51) MPC83XX

Reset Status:

CPU: e300c3, MPC8308, Rev: 1.0 at 400 MHz, CSB: 133.333 MHz

Board: Freescale MPC8308WMG Rev <unknown>

I2C: ready

DRAM: 128 MB

FLASH: 8 MB

NAND: 32 MiB

PCIE0: No link

In: serial

Out: serial

Err: serial

MMC: FSL\_ESDHC: 0

Net: eTSEC0, eTSEC1

Hit any key to stop autoboot: 0

=>



### **3. References**

For more information, refer to MPC8308-NSG User's Guide.pdf.

**How to Reach Us:**

**Home Page:**

www.freescale.com

**E-mail:**

support@freescale.com

**USA/Europe or Locations Not Listed:**

Freescale Semiconductor  
Technical Information Center, CH370  
1300 N. Alma School Road  
Chandler, Arizona 85224  
+1-800-521-6274 or +1-480-768-2130  
support@freescale.com

**Europe, Middle East, and Africa:**

Freescale Halbleiter Deutschland GmbH  
Technical Information Center  
Schatzbogen 7  
81829 Muenchen, Germany  
+44 1296 380 456 (English)  
+46 8 5220080 (English)  
+49 89 92103 559 (German)  
+33 1 69 35 48 48 (French)  
support@freescale.com

**Japan:**

Freescale Semiconductor Japan Ltd.  
Headquarters  
ARCO Tower 15F  
1-8-1, Shimo-Meguro, Meguro-ku,  
Tokyo 153-0064, Japan  
0120 191014 or +81 3 5437 9125  
support.japan@freescale.com

**Asia/Pacific:**

Freescale Semiconductor Hong Kong Ltd.  
Technical Information Center  
2 Dai King Street  
Tai Po Industrial Estate  
Tai Po, N.T., Hong Kong  
+800 2666 8080  
support.asia@freescale.com

**For Literature Requests Only:**

Freescale Semiconductor Literature Distribution Center  
P.O. Box 5405  
Denver, Colorado 80217  
1-800-521-6274 or 303-675-2140  
Fax: 303-675-2150  
LDCForFreescaleSemiconductor@hibbertgroup.com

Revision Number: 1.0

26 July 2011

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc. Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2011 Freescale Semiconductor, Inc. All rights reserved.